


Indication DIN left/right


DIN = German Industrial Standard

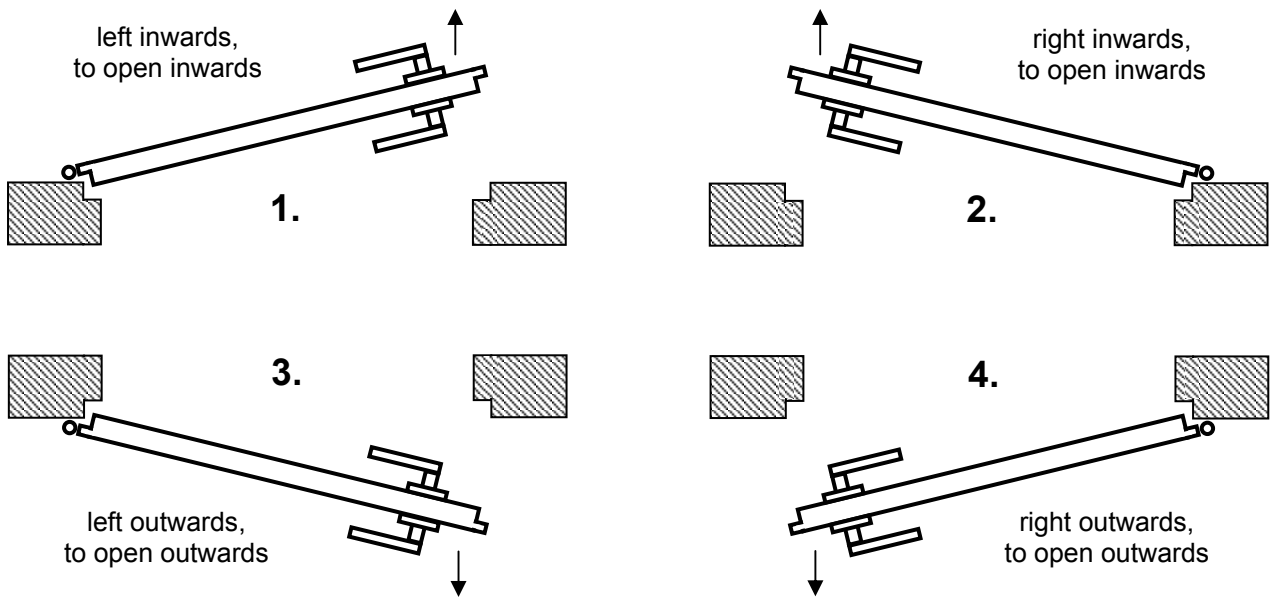

Rule-of-thumb: The door has to be looked at from the side where the door hinges can be seen. (Direction left/right is required for door fittings of KARCHER, for lever sets with handle/knob.)

1. left inwards = door DIN direction right / lever handle DIN right (handle points right)
2. right inwards = door DIN direction left / lever handle DIN left (handle points left)
3. left outwards = door DIN direction left / lever handle DIN right (handle points right)
4. right outwards = door DIN direction right / lever handle DIN left (handle points left)


DIN left

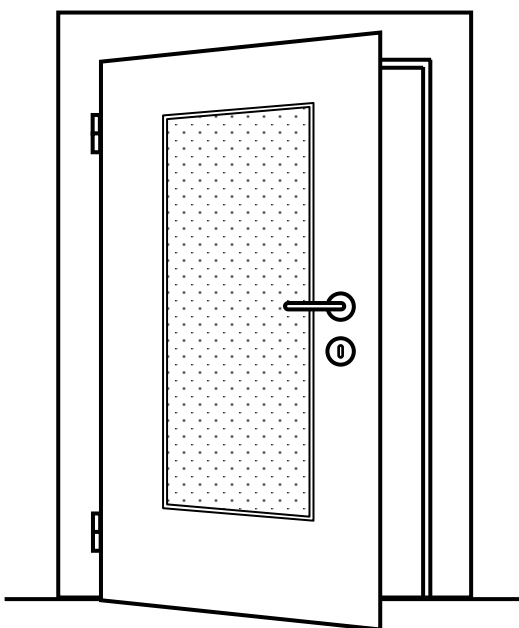

lever handle points left



DIN right

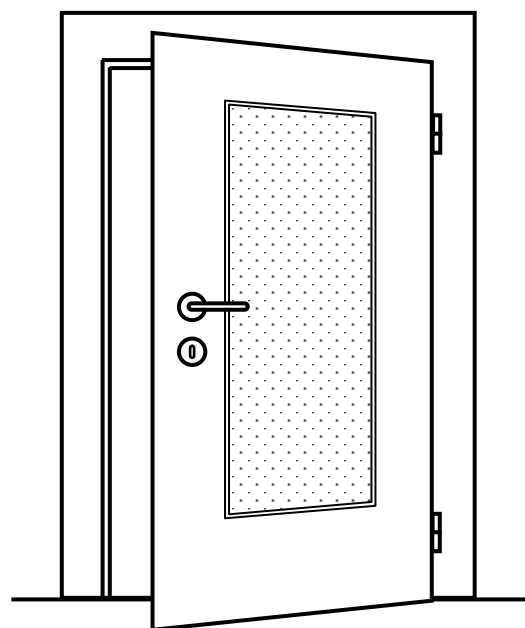

lever handle points right

